



Opening the Workstation

- Remove the left side panel of the housing (the one with the ventilation holes).
- Open the cover of the workstation by lifting the handle on its center.




Remove the PCI Riser Cage

- See instruction on the Riser Cage.

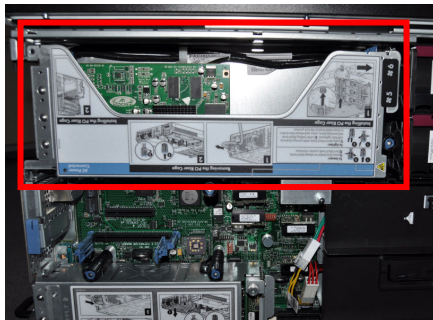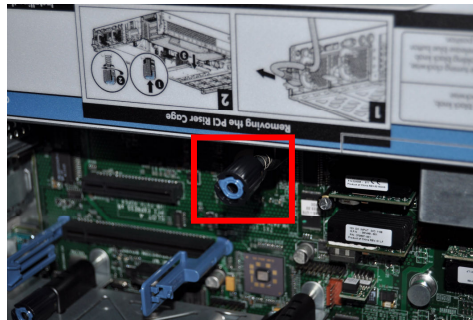

Uninstall or install the PCI Card

- **ATTENTION:** These are electrostatic sensitive components! Make precautions and handle with care!
- Uninstall or install the PCI.

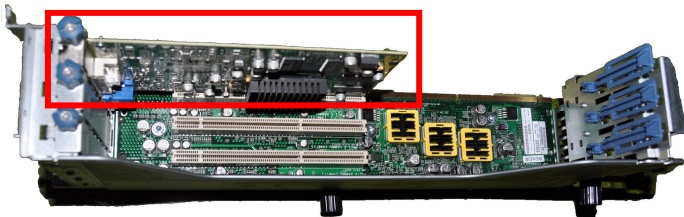

- Insert the riser cage following the instructions on it and close the workstation and housing.